## **Tractor service Reset - All Models**

Countax / Wetswood (C50,C60, B60-4wd, B250-4wd / T50, T60, F60-4wd, F250-4wd



# Service Icon Reset Procedure (Every 25, 50 & 75 hour period)

- Start the engine.
- During the one minute period that the total hours run are displayed, press and hold the time setting button for three seconds.
- Once the three seconds are reached, the display will show In 1 or In 2 to acknowledge that the reset has happened.

Note: The 100 hour or one year service period can only be reset by an authorised dealer.

## **Dealer Only Reset Procedure**

Ignition in the off position.


Remove the 20amp for 7 seconds

Press & hold the button on the display.

With the button held in re-insert the 20 amp fuse.

The display will show 'Ser' to acknowlege the reset.

## Countax / Wetswood (C50,C60, B60-4wd, B250-4wd / T50, T60, F60-4wd, F250-4wd

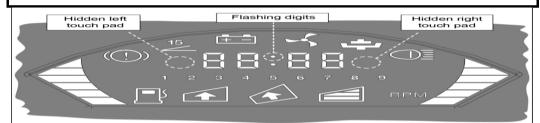

## **Engineering mode**

Engineering mode is represented by 'Eng' on the digital display. To enter Eng mode;

- 1. First press and hold right pad.
- 2. After a couple of seconds press and hold left pad.
- 3. Hold both pads for 11 seconds. The display will change and flash 'Eng'.
- 4. Tap left pad to scroll through engineering options.
- 5. To escape engineering mode and to accept all changes turn the ignition off.

#### Inspection 1 (In1)

To reset visual check reminder;

- 1. Enter engineering mode and scroll to 'In1'.
- 2. Tap right pad to enter option.
- 3. Hold right pad for a few seconds until option resets.
- 4. Tap left pad to jump back to engineering mode.

#### Inspection 2 (In2)

To reset visual check reminder;

- 1. Enter engineering mode and scroll to 'In2'.
- 2. Tap right pad to enter option.
- 3. Hold right pad for a few seconds until option resets.
- 4. Tap left pad to jump back to engineering mode.

Service (Ser)	
To reset service interval reminder;	To reset service interval reminder;
1. Enter engineering mode and scroll to 'SEr'.	2. Tap right pad to enter option.
3. Hold right pad for a few seconds until	
service resets.	4. Tap left pad to jump back to engineering mode.